

User Manual

Ver 1.0

(H2G S5~S20-G1)



Prepared by:	
Check by:	
Approved by:	
Date:	

Change History

■ AMENDMENT RECORDS

[illegible]

Contents

1. SAFETY PRECAUTIONS	ERROR! BOOKMARK NOT DEFINED.
1.1 GENERAL SAFETY	2
1.2 PERSONNEL REQUIREMENTS.....	5
1.3 ELECTRICAL SAFETY	5
1.4 BATTERY SAFETY	7
1.5 STORAGE REQUIREMENTS	11
1.6 TRANSPORTATION REQUIREMENTS	11
1.7 INSTALLATION ENVIRONMENT REQUIREMENTS	13
1.8 MECHANICAL SAFETY.....	14
1.9 COMMISSIONING	15
1.10 MAINTENANCE AND REPLACEMENT	15
2. PRODUCT INTRODUCTION	16
2.1 OVERVIEW.....	16
2.2 APPEARANCE	17
2.3 NAMEPLATE DESCRIPTION	18
2.4 DIMENSIONS.....	19
2.5 CAPACITY OPTIONS.....	19
2.6 RECOMMENDED SETTINGS.....	19
3. SYSTEM INSTALLATION.....	20
3.1 CHECKING BEFORE THE INSTALLATION	20
3.2 PREPARING TOOLS AND INSTRUMENTS	21
3.3 DETERMINING THE INSTALLATION POSITION.....	22
3.4 EQUIPMENT INSTALLATION	22
4. EXTERNAL ELECTRICAL CONNECTIONS OF THE BATTERY	23
4.1 CONNECT THE BATTERY TO PCS.....	23
4.2 INSTALLING A PE CABLE.....	24
5. SYSTEM COMMISSIONING	25
5.1 VERIFICATION BEFORE POWER-ON.....	25
5.2 SYSTEM POWER-ON.....	27
6. SYSTEM MAINTENANCE	33
6.1 SYSTEM POWER-OFF	33
6.2 ROUTINE MAINTENANCE	34
7. STORAGE & TRANSPORT	35
8. TECHNICAL SPECIFICATIONS.....	36

1.1 General Safety

Symbol Conventions

The symbols that may be found in this document are defined as follows



Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



Indicates warning information about device or environment security which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.

NOTICE is used to address practices not related to personal injury.



Supplements the important information in the main text.

NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Declaration

- Before installing, operating, and maintaining the equipment, read this document and observe all the safety instructions on the equipment and in this document.
- The "NOTICE", "WARNING", and "DANGER" statements in this document do not cover all the safety instructions. They are only supplements to the safety instructions. H2G will not be liable for any consequence caused by the violation of general safety requirements or design, production, and usage safety standards.
- Ensure that the equipment is used in environments that meet its design specifications. Otherwise, the equipment may become faulty, and the resulting malfunction, component damage, personal injuries, or property damage are not covered under the warranty.
- Follow local laws and regulations when installing, operating, or maintaining the equipment. The safety instructions in this document are only supplements to local laws and regulations.

H2G will not be liable for any consequences of the following circumstances:

- Operation beyond the conditions specified in this document
- Installation or use in environments that cannot meet relevant international, national, or local standards
- Unauthorized modifications to the product or software code or removal of the product
- Failure to follow the operation instructions and safety precautions on the product and in this document
- Equipment damage due to force majeure, such as earthquakes, fire, storms, floods and debris flows
- Damage caused during transportation by the customer
- Damage caused by storage conditions that do not meet the requirements specified in related documents
- Damage to the hardware or data of the equipment due to customer negligence, improper operation, or intentional damage
- System damage caused by improper operations of a third party or customer, including those in transportation, installation, and adjustment, alteration, or removal of identification marks

General Requirements

 DANGER

Improper operations on high-voltage equipment may cause an electric shock or fire, which could result in death, serious injury, or serious property damage. Perform standard operations as follows:

- Do not install, use, or operate outdoor equipment and cables (including but not limited to moving equipment, operating equipment and cables, inserting connectors to or removing connectors from signal ports connected to outdoor facilities, working at heights, and performing outdoor installation) in harsh weather conditions such as lightning, rain, snow, and level 6 or stronger wind.
- Observe the safety precautions specified in the warning signs and protection labels on the equipment.
- Use correct tools properly as required in this manual.
- Do not perform installation, cable connection, maintenance, or replacement when the equipment is energized.
- Do not clean the equipment with water.
- Do not open the host panel of the equipment.
- Check that the equipment is not damaged. For example, check that the battery is not dropped, bumped, or dented on the enclosure.
- Before handling a conductor surface or terminal, measure the contact point voltage and ensure that there is no risk of electric shock.
- Repaint any paint scratches caused during equipment transportation or installation in a timely manner. Equipment with scratches cannot be exposed to an outdoor environment for a long period of time.
- Ensure that battery terminal components are not affected during transportation. Do not hoist or move batteries by using battery terminals.
- Without prior consent from the manufacturer, do not alter the internal structure or installation procedure of the equipment.
- In the case of a fire, immediately leave the building or the equipment area, and turn on the fire alarm bell or make an emergency call. Do not enter the building on fire in any case.

NOTICE

- During transportation, turnover, installation, cable connection, and maintenance, comply with the national and local laws, regulations, and relevant standards.
- The materials and tools prepared by the customer must comply with the national and local laws, regulations, and relevant standards.
- Obtain approval from the national and local electric utility company before connecting the equipment to the grid.
- Understand the components and functioning of a grid-tied PV power system and relevant local standards.

 NOTE

- You shall not reverse engineer, decompile, disassemble, adapt, add code to the device software or alter the device software in any other way, research the internal implementation of the device, obtain the device software source code, infringe on H2G intellectual property, or disclose any device software performance test results.

1.2 Personnel Requirements

- Personnel who plan to install or maintain H2G equipment must receive thorough training, understand all necessary safety precautions, and be able to correctly perform all operations.
- Only qualified professionals or trained personnel are allowed to install, operate, and maintain the equipment.
- Only qualified professionals are allowed to remove safety facilities and inspect the equipment.
- Personnel who will operate the equipment, including operators, trained personnel, and professionals, should possess the local national required qualifications in special operations such as high-voltage operations, working at heights, and operations of special equipment.
- Only professionals or authorized personnel are allowed to replace the equipment or components (including software).

 NOTE

- Professionals: personnel who are trained or experienced in equipment operations and are clear of the sources and degree of various potential hazards in equipment installation, operation, and maintenance
- Trained personnel: personnel who are technically trained, have required experience, are aware of possible hazards on themselves in certain operations, and are able to take protective measures to minimize the hazards on themselves
- Operators: operation personnel who may come in contact with the equipment, except trained personnel and professionals

1.3 Electrical Safety

Grounding Requirements

- For the equipment that needs to be grounded, install the protective earthing (PE) cable first when installing the equipment and remove the PE cable last when removing the equipment.
- Do not damage the ground conductor.

- Do not operate the equipment in the absence of a properly installed ground conductor.
- Ensure that the equipment is connected permanently to the protective ground. Before operating the equipment, check the electrical connection to ensure that it is securely grounded.

General Requirements



Before connecting cables, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.

- Ensure that all electrical connections comply with local electrical standards.
- Obtain approval from the local electric utility company before using the equipment in grid-tied mode.
- Ensure that the cables you prepared meet local regulations.
- Use dedicated insulated tools when performing high-voltage operations.

DC Operation



Do not connect or disconnect power cables with power-on. Transient contact between the core of the power cable and the conductor will generate electric arcs or sparks, which may cause fire or personal injury.

- Before connecting cables, switch off the disconnect on the upstream equipment to cut off the power supply if people may contact energized components.
- Before connecting a power cable, check that the label on the power cable is correct.
- If the equipment has multiple inputs, disconnect all the inputs before operating the equipment.

Cabling Requirements

- When routing cables, ensure that a distance of at least 30 mm exists between the cables and heat-generating components or areas. This prevents damage to the insulation layer of the cables.
- Bind cables of the same type together. When routing cables of different types, ensure that they are at least 30 mm away from each other.
- Ensure that the cables used in a grid-tied PV power system are properly connected and insulated and meet specifications.
- The positions where cables are routed through pipes or holes must be protected to prevent the cables from being damaged by sharp edges or burrs.
- When the temperature is low, violent impact or vibration may damage the plastic cable sheathing. To ensure safety, comply with the following requirements:
- Cables can be laid or installed only when the temperature is higher than 0°C. Handle cables with caution, especially at a low temperature.
- Cables stored at subzero temperatures must be stored at room temperature for at least 24 hours before they are laid out.

ESD

NOTE

The static electricity generated by human bodies may damage the electrostatic- sensitive components on boards, for example, the large-scale integrated (LSI) circuits.

- Wear ESD gloves when handling the equipment. Do not wear clothes prone to static electricity.

1.4 Battery Safety

Declaration

The Company shall not be liable for equipment functional abnormality, component damage, personal safety accident, property loss, or other damage caused by the following reasons:

- The batteries are not charged as required during storage, resulting in capacity loss or irreversible damage to the batteries.
- A battery is damaged, falls, or leaks due to improper operations or incorrect connection.
- After being installed and connected to the system, the batteries are not powered on in time, which causes damage to the batteries due to overdischarge.
- Battery running parameters are incorrectly set
- The customer or a third party uses the batteries beyond the scenarios specified by the Company. For example, connect extra loads, or use with other batteries, including but not limited to batteries of other brands or batteries of different rated capacities.
- Damage is caused to batteries because the battery operating environment or external power parameters do not meet environment requirements. The actual operating temperature of batteries is too high or too low, or the power grid is unstable and experiences outages frequently.
- Batteries are frequently overdischarged due to improper maintenance, capacity is incorrectly expanded, or the batteries have not been fully charged for a long time.
- Batteries are not maintained based on the operation guide, such as failure to check battery terminals regularly.
- Batteries are stolen.
- The warranty period of batteries has expired.

Basic Requirements



- Do not expose batteries at high temperatures or around heat-generating sources, such as sunlight, fire sources, transformers, and heaters. The battery may cause a fire if overheated.
- To avoid leakage, overheating, or fire, do not disassemble, alter, or damage batteries. For example, do not insert foreign objects into batteries or place batteries in water or other liquids.
- The fire hazard of the sodium-ion battery energy storage system is high. Consider the following safety risks before handling batteries:
 - Battery electrolyte is combustible, toxic, and volatile.
 - Battery thermal runaway can generate flammable gas and harmful gas such as CO and C₂H₂.
 - The concentration of flammable gas generated from battery thermal runaway may cause deflagration and explosion.
- The batteries must be stored separately inside the packaging. Do not store batteries together with other materials or in the open air. Do not stack batteries too high.
- Do not use batteries beyond the warranty period.
- Do not remove the battery packaging before use. Batteries should be charged during storage by professionals as required. Put batteries back to their packaging after charge during storage.
- Move batteries in the correct direction. Do not place a battery upside down or tilt it.
- Protect batteries from impact.
- Do not perform welding or grinding work around batteries to prevent fire caused by electric sparks or arcs.
- Use batteries within the temperature range specified in this manual.
- Do not use damaged batteries (such as damage caused when a battery is dropped, bumped, or dented on the enclosure). Damaged batteries may release flammable gases. Do not store damaged batteries near undamaged products.
- Do not place damaged batteries in close proximity to flammable materials. Do not approach the damaged batteries unless you are a professional.
- Monitor damaged batteries during storage for signs of smoke, fame, electrolyte leakage, or heat.

Personal Safety

- Wear proper personal protective equipment (PPE) during operation. If there is a probability of personal injury or equipment damage, immediately stop the operations, report the case to the supervisor, and take feasible protective measures.
- Use tools correctly to avoid hurting people or damaging the equipment.
- Do not touch the energized equipment, as the enclosure is hot.
- To ensure personal safety and normal use of the equipment, the equipment must be reliably grounded before use.
- When a battery is faulty, the temperature may exceed the burn threshold of the touchable surface. Therefore, avoid touching the battery.
- Do not disassemble or damage the battery. The released electrolyte is harmful to your skin and eyes. Avoid contact with the electrolyte.

- Do not place irrelevant objects on the top of the equipment or insert them into any position of the equipment.
- Do not place inflammables around the equipment.
- To prevent explosions and body injury, do not place batteries in a fire.
- Do not place the battery module in water or other liquids.
- Do not short-circuit wiring terminals of batteries. Short circuits can cause a fire.
- Batteries may cause electric shocks and high short-circuit currents. When using the battery, pay attention to the following points:
 - (a) Remove any metal objects from yourself, such as watches and rings.
 - (b) Use tools with insulated handles.
 - (c) Wear rubber gloves and boots.
 - (d) Do not place tools or metal parts on top of batteries.
 - (e) Before connecting or disconnecting battery terminals, disconnect the charging power supply.
 - (f) Check whether batteries are accidentally grounded. If it is accidentally grounded, remove the power supply from the ground. Touching any part of a grounded battery can cause an electric shock. If these grounding points are removed during installation and maintenance, the possibility of electric shocks can be reduced.
- Do not use water to clean electrical components inside or outside of a cabinet.
- Do not stand on, lean on, or sit on the top of the equipment.
- Do not damage the modules of the equipment.

Battery Installation Requirements

- Before installing batteries, check whether the packaging is intact. Do not use batteries with damaged packaging.
- During installation, ensure that the positive and negative electrodes of a battery are not short-circuited.
- During installation, ensure that the screws are tightened properly using a torque wrench and check them regularly.
- After installing the equipment, remove idle packing materials such as cartons, foam, plastics, and cable ties from the equipment area.

Hazardous and Toxicity Class



- Hazard: It may cause heat generation or electrolyte leakage if battery terminals contact with other metals. Electrolyte is flammable. In case of electrolyte leakage, move the battery from fire immediately.
- Toxicity: Vapor generated from burning batteries, may make eyes, skin, and throat irritate.

Battery Emergency Measures

 DANGER

- Avoid contact with leaked liquids or gases in the case of battery leakage or abnormal odor. Do not approach the battery. Contact professionals immediately. Professionals must wear safety goggles, rubber gloves, gas masks, and protective clothing.
- Electrolyte is corrosive and can cause irritation and chemical burns. Should you come into direct contact with the battery electrolyte, do as follows:

Inhalation: Evacuate contaminated areas, get fresh air immediately, and seek immediate medical attention.

Eye contact: Immediately flush your eyes with water for at least 15 minutes, do not rub your eyes, and seek medical attention immediately.

Skin contact: Wash the affected areas immediately with soap and water and seek medical attention immediately.

Ingestion: Seek immediate medical attention.

Fire Emergency Measures

 DANGER

- Power of the system if it is safe to do so.
- If any part of the batteries is submerged in water, do not touch the batteries to avoid electric shock.
- Do not use batteries that have been soaked in water. Contact a battery recycling company for disposal.

Dropped Battery Emergency Measures

 DANGER

- If a battery pack is dropped or violently impacted during installation, internal damage may occur. Do not use such battery packs; otherwise, safety risks such as cell leakage and electric shock may arise.
- If a dropped battery has obvious damage or abnormal odor, smoke, or fire occurs, evacuate the personnel immediately, call emergency services, and contact the professionals. The professionals can use fire extinguishing facilities to extinguish the fire under safety protection.
- If a dropped battery has no obvious deformation or damage and no abnormal odor, smoke, or fire occurs, contact the professionals to transfer the battery to an open and safe place, or contact a recycling company for disposal.

Battery Recycling

- Dispose of used batteries in accordance with local laws and regulations. Do not dispose of batteries as household waste.
- If the batteries leak or are damaged, contact technical support or a battery recycling company for disposal.
- If the batteries are out of service life, contact a battery recycling company for disposal.
- Do not expose batteries to high temperatures or direct sunlight.
- Do not expose batteries to high humidity or corrosive environments.

1.5 Storage Requirements

General Requirements

NOTE

- Record storage data such as temperature, humidity, and storage environment in compliance with the storage requirements in this manual.
- Do not store batteries for extended periods. Storing sodium-ion batteries for extended periods may cause capacity loss. Generally, the irreversible capacity loss is 3% to 10% after sodium-ion batteries are stored at the recommended storage temperature range for 12 months.
- The storage environment must comply with local regulations and standards.
- If a battery has been stored for longer than the allowed period, it must be checked and tested by professionals before use.
- Place batteries according to the signs on the packing case during storage. Do not put batteries upside down or sidelong.
- Stack battery packing cases in compliance with the stacking requirements on the external package.
- Handle batteries with caution to avoid damage.

The storage environment requirements are as follows:

- Ambient temperature: -10–55°C; recommended storage temperature: 20–30°C
- Relative humidity: 5% to 80%
- The batteries must be stored in a clean, dry, and well-ventilated place and be protected from dust and water vapor corrosion. The batteries must be protected against rain and water.
- Relative humidity: 5% to 80%
- Keep batteries away from direct sunlight.

1.6 Transportation Requirements

NOTE

The product passes the certifications of the UN38.3.

Loading and unloading:

- Load and unload the batteries in compliance with local laws, regulations, and industry standards. Reckless handling may cause short circuits or damage to batteries in the container, which may result in battery leakage, rupture, explosion, or fire.

Before transportation:

- Check that the batteries are intact and there is no obvious odor, smoke, or fire. Otherwise, the batteries cannot be transported.

NOTE

The product can be delivered to the site directly and transported by land and water. The packing case must be secured for transportation. Handle the product with care during loading, unloading, and transportation with moisture-proof measures in place. The actual capacity may vary depending on the environment conditions, such as temperature, transportation conditions, and storage conditions.

During transportation:

- The batteries cannot be transported by rail or air.
- Maritime transport must comply with the International Maritime Dangerous Goods Code (IMDG Code).
- Comply with the requirements of the transportation regulatory authorities in the countries of departure, route, and destination.

Comply with the international regulations on the transport of dangerous goods and the requirements of the transport regulatory authorities of the respective countries.

Protect the packing case with the product from the following situations:

- Being dampened by rains, snows, or falling into water
- Falling or mechanical impact
- Being upside-down or tilted


NOTE

If any of the preceding exceptions occurs, take the emergency measures.

1.7 Installation Environment Requirements

- The installation and use environment must meet relevant international, national, and local standards for sodium-ion batteries, and are in accordance with the local laws and regulations.
- Ensure that the battery is not accessible to children and away from daily working or living areas, including but not limited to the following areas: studio, bedroom, lounge, living room, music room, kitchen, study, game room, home theater, sunroom, toilet, bathroom, laundry, and attic.
- When installing the battery in a garage, keep it away from the drive way. It is recommended that the battery be mounted on the wall higher than the bumper to prevent collision.
- When installing the battery in a basement, keep good ventilation. Do not place flammable or explosive materials around the battery. It is recommended that the battery be mounted on the wall to avoid contact with water.
- Install the battery in a dry and well-ventilated environment. Secure the battery on a solid and flat surface.
- Install the battery in a sheltered place or install an awning over it to avoid direct sunlight or rain.
- Install the battery in a clean environment that is free from sources of strong infrared radiation, organic solvents, and corrosive gases.
- For areas prone to natural disasters such as floods, debris flows, earthquakes, and typhoons/hurricanes, take corresponding precautions for installation.
- Keep the battery away from fire sources. Do not place any flammable or explosive materials around the battery.
- Keep the battery away from water sources such as taps, sewer pipes, and sprinklers to prevent water seepage.
- Do not install the battery in a position where it is easy to touch as the temperature of the chassis and heat sink is high when the battery is running.
- To prevent fire due to high temperature, ensure that the vents and the cooling system are not blocked when the battery is running.
- Do not expose the battery to flammable or explosive gas or smoke. Do not perform any operation on the battery in such environments.
- Do not install the battery on a moving object, such as ship, train, or car.
- In backup power scenarios, do not use the battery for the following situations:
 - a. medical devices substantially important to human life
 - b. Control equipment such as trains and elevators, which may cause personal
 - c. computer systems of social and public importance
 - d. locations near medical devices
 - e. other devices similar to those described above


Do not install the battery outdoors in salt-affected areas because it may corrode. A salt-affected area refers to the region within 500 meters from the coast or prone to sea breeze. The regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).

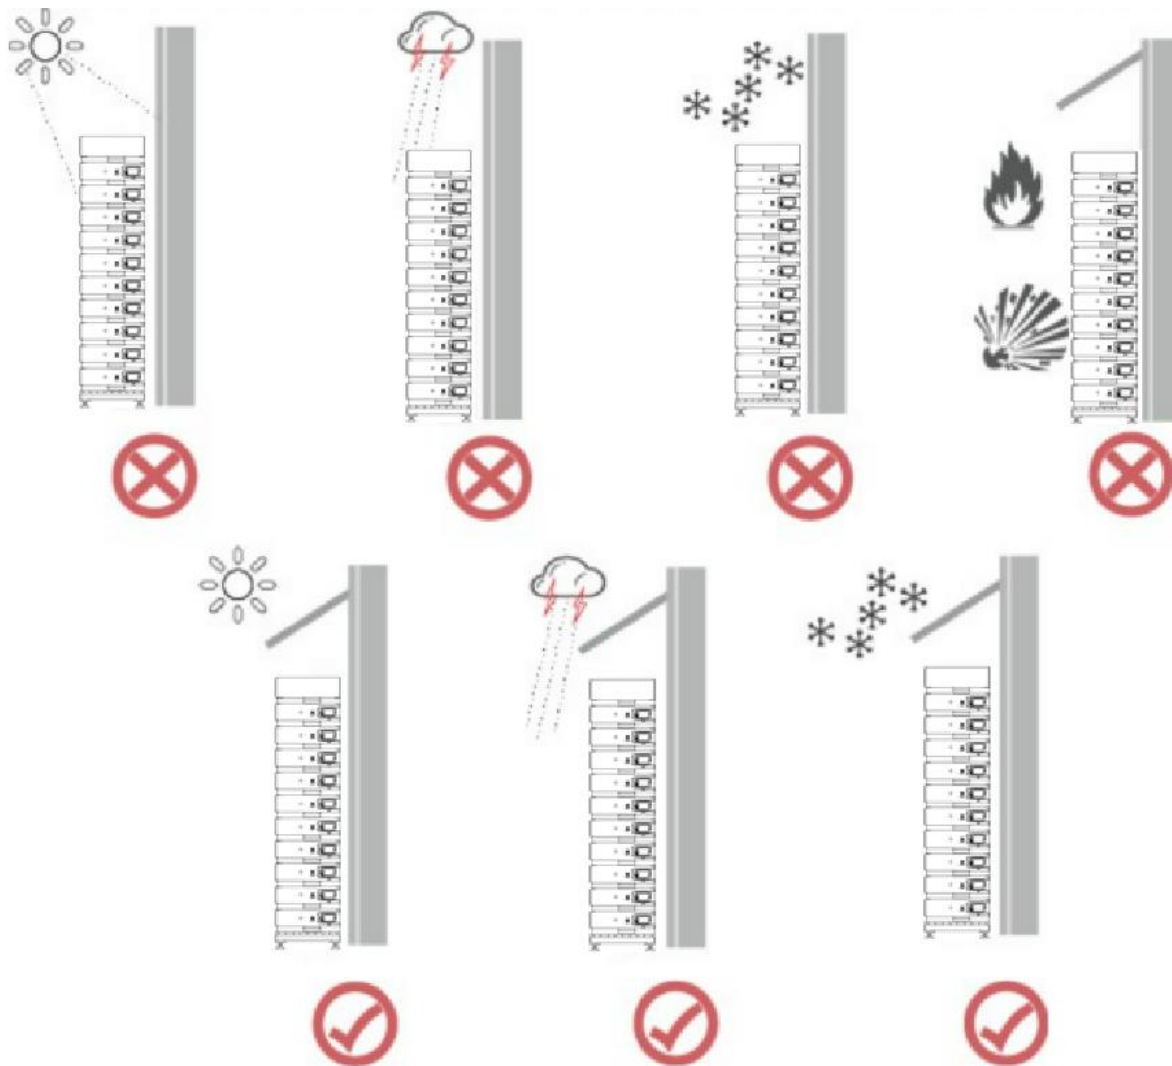

1.8 Mechanical Safety

Moving Heavy Objects

- Be cautious to avoid injury when moving heavy objects.

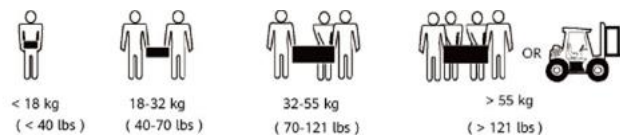

- When moving the equipment by hand, wear protective gloves to prevent injuries.

1.9 Commissioning

When the equipment is powered on for the first time, ensure that professional personnel set parameters correctly.

Incorrect settings may result in inconsistency with local certification and affect the normal operation of the equipment.

1.10 Maintenance and Replacement



High voltage generated by the equipment during operation may cause an electric shock, which could result in death, serious injury, or serious property damage.

Prior to maintenance, power of the equipment and strictly comply with the safety precautions in this document and relevant documents.

- Maintain the equipment with sufficient knowledge of this document and using proper tools and testing equipment.
- Before maintaining the equipment, power it off and follow the instructions on the delayed discharge label to ensure that the equipment is powered off.
- Place temporary warning signs or erect fences to prevent unauthorized access to the maintenance site.
- If the equipment is faulty, contact your dealer.
- The equipment can be powered on only after all faults are rectified. Failing to do so may escalate faults or damage the equipment.
- Do not open the cover without authorization. Otherwise, electric shocks may occur, and the resulting faults are beyond warranty scope.
- Installation personnel, maintenance personnel, and technical support personnel must be trained to operate and maintain the equipment safely and correctly, take comprehensive precautionary measures, and be equipped with protective instruments.
- Before moving or reconnecting the equipment, disconnect the mains and batteries and wait for five minutes until the equipment powers off. Before maintaining the equipment, check that no dangerous voltages remain in the DC bus or components to be maintained by using a multimeter.
- Battery maintenance should be carried out or supervised by personnel who are familiar with batteries and the precautions required.
- When replacing batteries, replace them with batteries or battery strings of the same type.
- Take out all tools and parts from the equipment after maintenance is complete.
- If the equipment is not used for a long time, store and recharge batteries according to this document.

1. Product Introduction

2.1 Overview

Function


The battery consists of a power control module, a base, a cover and battery expansion modules. It can store and release electric energy based on the requirements of the inverter management system.

● **Battery charge:** The power control module connects to the battery terminals (BAT+ and BAT-) of the inverter. Under the control of the inverter, the power control module charges the batteries and stores excessive PV energy in batteries.

● **Battery discharge:** When the PV energy is insufficient to supply power to the loads, the system controls the batteries to supply power to the loads. The battery energy is output to the loads through the inverter.


Battery Capacity Description

One power control module supports a maximum of eight battery expansion modules.

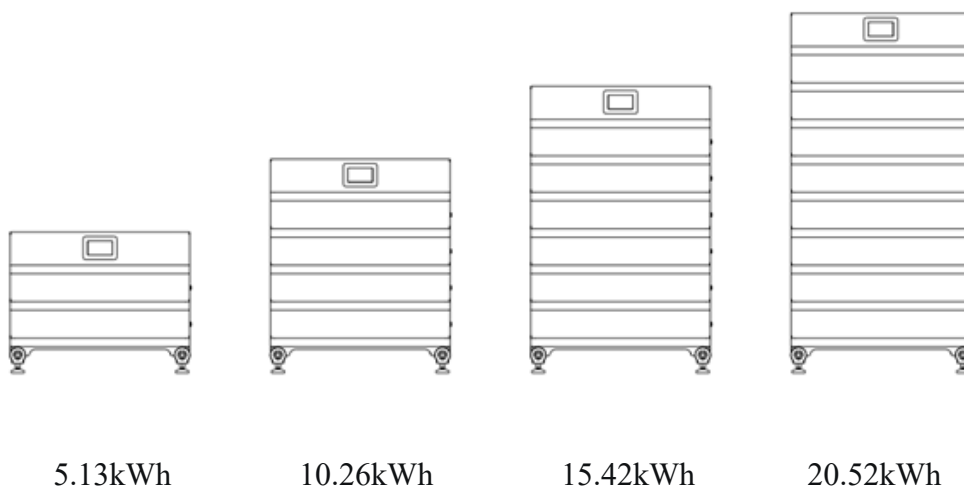

Networking Application


The battery is applicable to the grid-tied systems of residential rooftop PV plants. Typically, a grid-tied system consists of PV strings, S5~S20-G1 batteries, an inverter, an AC switch, and a power distribution box (PDB).

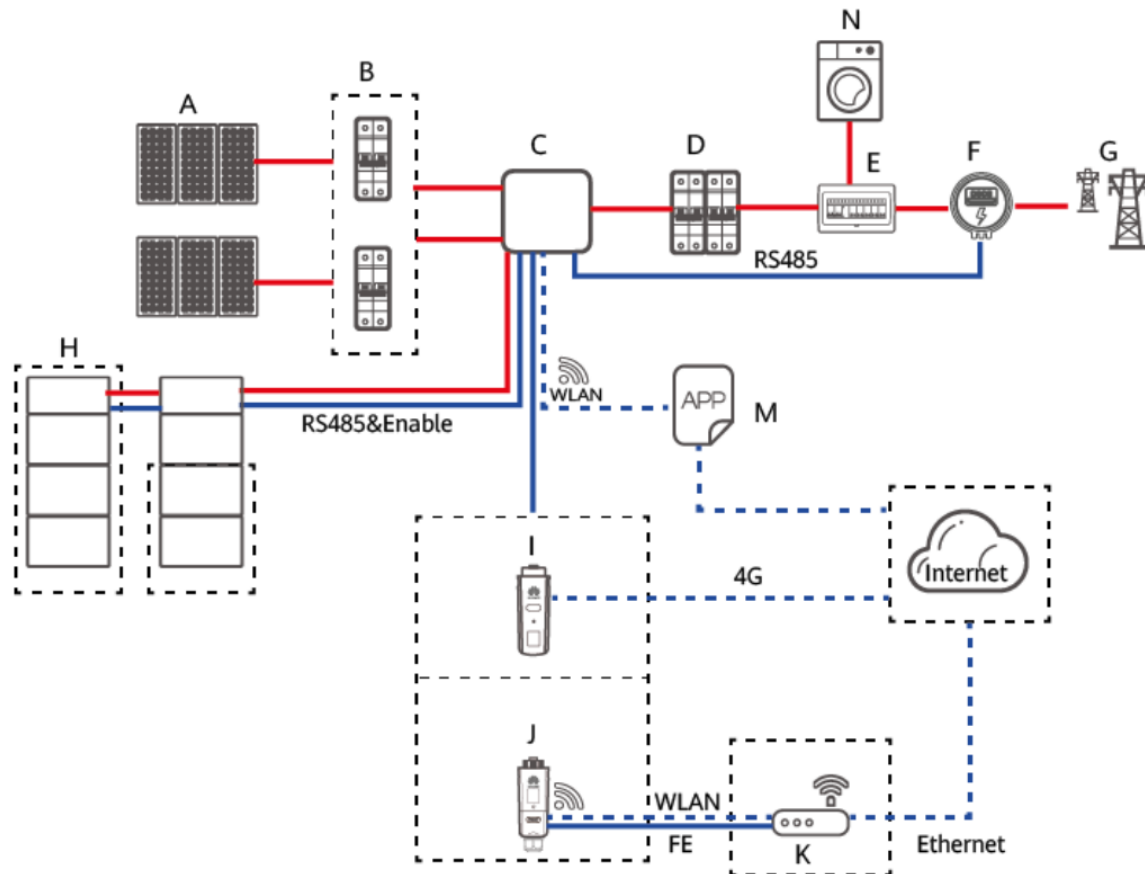

Item	Part	Item	Part	Item	Part
A	PV String	B	DC Switching	C	Inverter
D	AC Switch	E	ACDU	F	Smart Meter
G	Power Grid	H	H2G S5~S20-G1	I	4G Dongle
J	WIFI Dongle	K	Router	N	Load

2.2 Appearance

This topic describes the battery appearance.

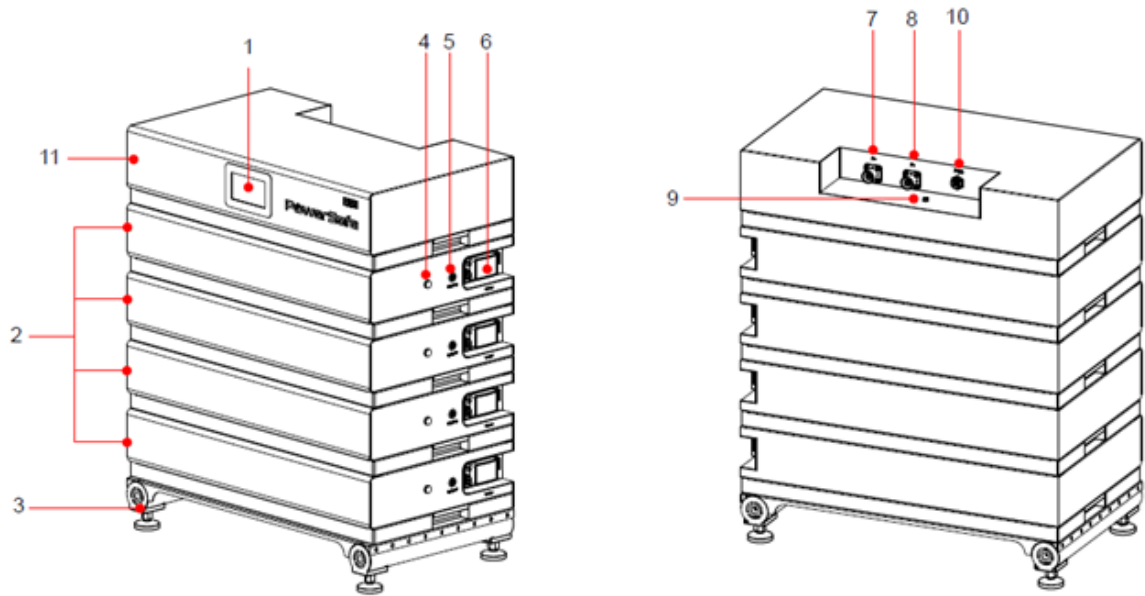

(1) LCD-indicator

(2) Battery expansion modules

(3) Base

(4) Explosion-proof valve

(5) ON/OFF

(6) Switch

(7) P+

(8) P-

(9) PE

(10) PCS


(10) Cover

2.3 Nameplate Description

Nameplate

Type : Sodium-ion Battery	
Model : VKNa5150	
Rated Voltage	51.3V
Rated Capacity	50Ah
Rated Energy	2565Wh
Max. Short Current and Duration	5000A, 0~30s
Operating Voltage	30V~63V
Max.Charging Current/Power	50A/3150W
Max.Discharging Current/Power	100A/6300W
Charge Operating Temperature	0°C~55°C
Discharge Operating Temperature	-30°C~60°C
IP Rating	IP65
Protection Class	I
MADE IN CHINA	
S/N	

2.4 Dimensions

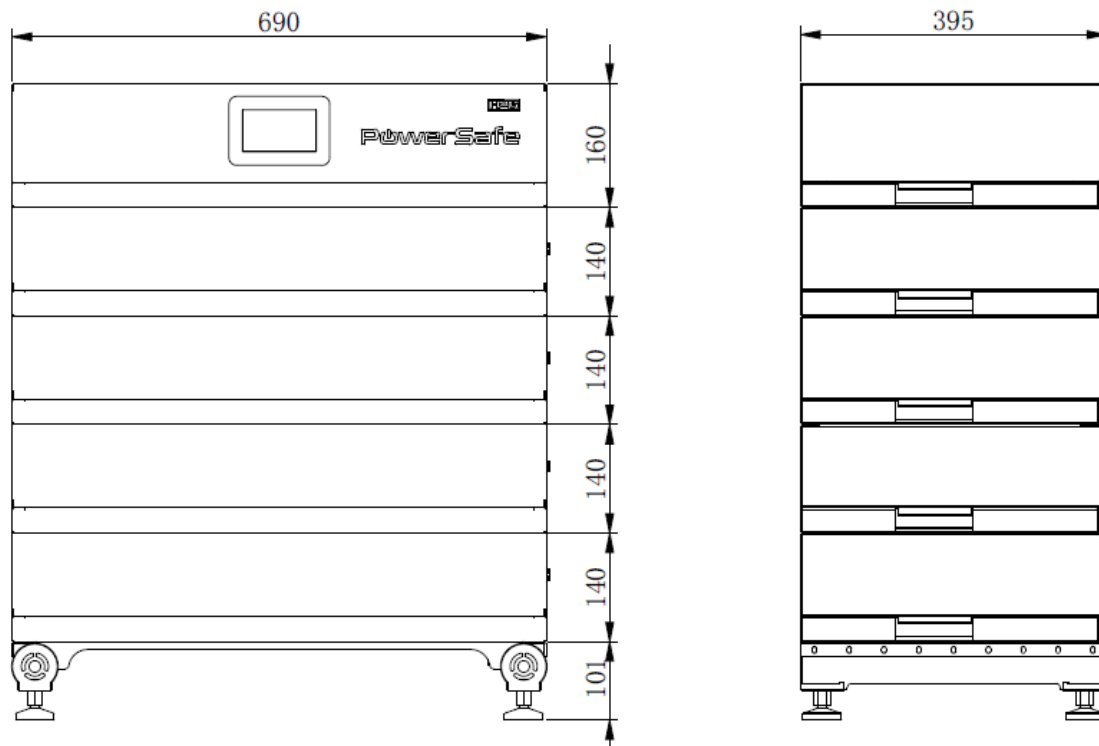

2.5 Capacity Options

The battery can be parallelly connected for extending power(kW) and energy(kWh).

- The maximum power(kW) is limited by main cables from master battery to inverter.
- The maximum 8 battery packs can be parallelly communicated.

2.6 Recommended Settings

Sodium-ion battery pack is not as the same as lead-acid battery, therefore the devices which you connect with the battery pack for charging and discharging, such as inverters, MPPT charger controllers or UPS, please implement pre-settings as recommended settings as below before start.

Setting	2565Wh
Max. Charging Voltage	63V
Max. Charging Current	Min. (50A*N, 250A)
Max. Discharging Current	Min. (100A*N, 250A)
Cut-off Voltage	30V

Notes: “N” means the number of battery packs connected in parallel.

2. System Installation

3.1 Checking Before the Installation

Checking the Outer Packing

Before unpacking the battery, check the outer packing for damage, such as holes and cracks, and check the battery model. If any damage is found or the battery model is not what you requested, do not unpack the product and contact your dealer as soon as possible.


Checking Deliverables

After unpacking the battery, check that the deliverables are intact and complete, and free from any obvious damage. If any item is missing or damaged, contact your dealer.

NOTE

For details about the number of deliverables delivered with the battery, see the Packing List in the packing case.

3.2 Preparing Tools and Instruments

Type	Tools and Instruments		
Installation	 Multimeter	 Heat gun	 Heat-shrink tubing
	 Hydraulic pliers		
Personal protective equipment (PPE)	 Safety gloves	 Safety goggles	 Dust mask
	 Safety boots		

3.3 Determining the Installation Position

Installation Angle Requirement

The battery can be floor-mounted and wall-mounted. The installation angle

requirement is as follows:


- Do not install the battery at forward tilted, back tilted, side tilted, or upside-down positions.

Installation Position Requirements

Install the battery on a solid brick-concrete structure or floor. If other types of floors are used, they must be made of fire-retardant materials and meet the load-bearing requirements of the equipment.

Installation Space Requirements

- During installation, ensure that there is no other devices or flammable or explosive materials around the batteries. Reserve adequate space for heat dissipation and safety isolation.
- When the battery is mounted on a wall, do not place any objects under the battery.

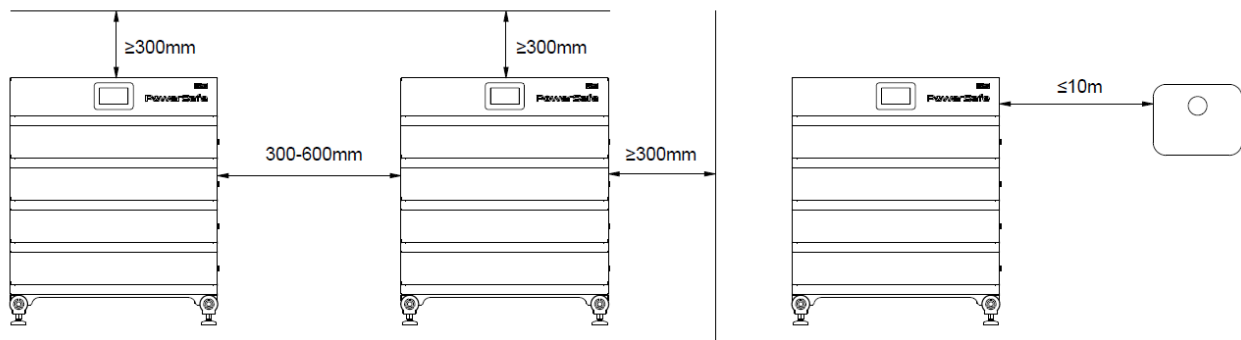

3.4 Equipment Installation


Floor-Mounted Installation

Procedure


Step 1: Installing the Base

Step 2: Place the battery modules on the Base


Step 3: Place the Cover

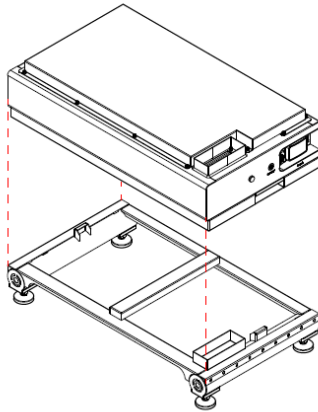

1

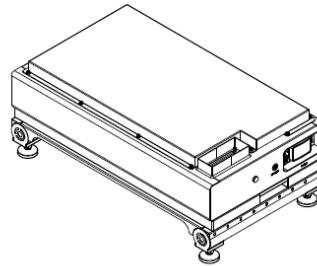

2

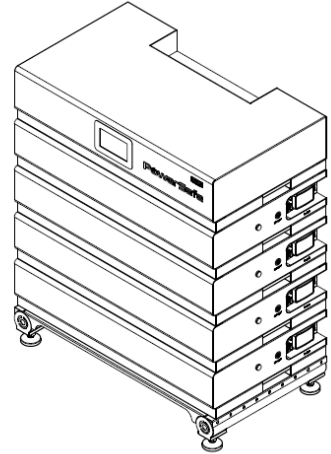


3

3. External Electrical Connections of the Battery

4.1 Connect the battery to PCS

Step 1: Connect the communication cable to PCS

Step 2: Connect the power cable to PCS

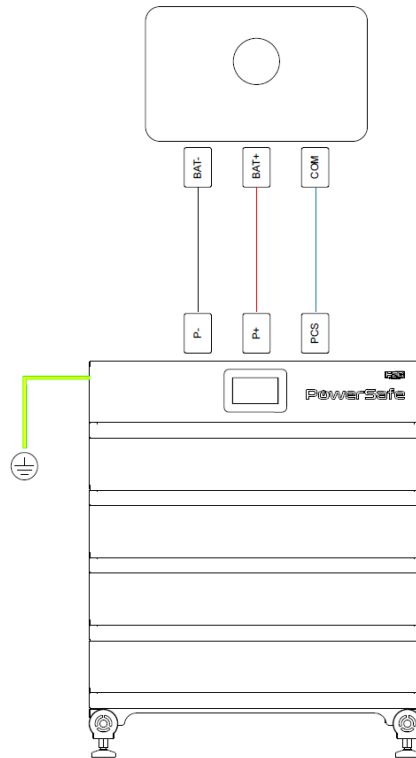

4.2 Installing a PE Cable

Precautions




Ensure that the PE cable is securely connected. Otherwise, electric shocks may occur.

Step 1 Crimp an OT terminal.

NOTICE

- Avoid scratching the core wire when stripping a cable.
- The cavity formed after the conductor crimp strip of the OT terminal is crimped must wrap the core wires completely. The core wires must contact the OT terminal closely.
- Wrap the wire crimping area with heat shrink tubing or insulation tape. The heat shrink tubing is used as an example.
- When using a heat gun, protect the equipment from being scorched.

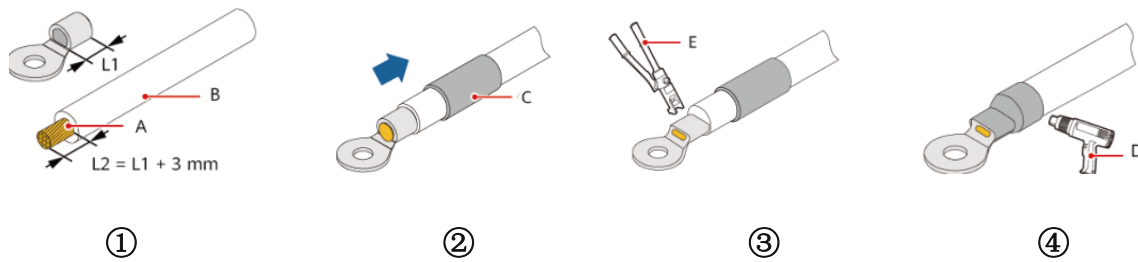

(A) Core wire (B) Insulation layer (C) Heat shrink tubing (D) Heat gun

(E) Hydraulic pliers

4. System Commissioning

5.1 Verification Before Power-On

Check items and acceptance criteria

No.	Check Item	Acceptance Criteria
1	Battery installation	The installation is correct and reliable.
2	Cables routing	Cables are routed properly as required by the customer.
3	Cable tie	Cable ties are evenly distributed and no burr exists.
4	Grounding	The PE cable is connected correctly, securely, and reliably.
5	Switch	The DC switch and all switches connected to the battery are OFF.
6	Cable connection	The battery cable, and signal cable are connected correctly, securely, and reliably.

7	Unused terminal and port	Unused terminals and ports are locked by watertight caps.
8	Installation environment	The installation space is proper, and the installation environment is clean and tidy.

5.2 System Power-On

NOTICE

- After turning on the battery switch, power on the inverter. For details about how to power on the inverter, see the quick guide for the corresponding inverter model.

LCD Screen

1. Main menu interface display content (as shown in the figure)

- (1) Select to enter Home, Para, Set, System.
- (2) Chinese/English switch



2. The content displayed on the home page interface (as shown in the figure)

- (1) Left side: Displays Total Voltage: xxxxV; Current: xA; Current Temperature: xxxx°C
- (2) Middle: Displays SOC: xxx%
- (3) Right side: Displays the system status: Running or Alarm/Prot



(4) Click Alarm/Protection (Alarm/Protection) to enter the alarm interface.



3. The content displayed on the parameter interface (as shown in the figure):

(1) Page 1: Display Content

Max voltage (max voltage): xxxxmV

Min voltage (min voltage): xxxxmV

Max temp (max temp):xxx℃

Min temp (min temp): xxxx℃

Current mode (current mode): 0 for standby, 1 for discharge, 2 for charge

Total voltage (bat voltage): xV

Total current (pack current): xxxxA

Battery count (battery count): xx

SOC: xxx%

System status (system status)

序号 No.	状态 System State	编码 Code
1	开机 Power On	0
2	自检 Self-check	1
3	待机 Standby	2
4	预充 Pre-charge	3
5	运行 Normal	4
6	充电禁止 Charge Prohibition/Discharge Ready	5
7	放电禁止 Discharge Prohibition/Charge Ready	6
8	放电保护 Discharge Protection	7
9	充电保护 Charge Protection	8
10	故障 Fault	9
11	关机 Power Off	10



(2) Page 2: Display Content

Cell: Use "+" or "-" to select the cell information to be read

Total cell voltage (bat voltage): xV

Total cell current (pack current): xxxxA

Cell SOC: xxx%

Cell SOH: xxx%

Cell system status (system status):

Cell max voltage: xxxxmV

Cell min voltage (min voltage): xxxxmV

Cell max temp (max temp): xxxx °C

Cell min temp (min temp): x °C



(3) Display content

cell1: xxxxmV

cell2: xxxxmV

cell3: xxxxmV

cell4: xxxxmV

cell5: xxxxmV

cell6: xxxxmV

cell7: xxxxmV cell8: xxxxmV cell9: xxxxmV

cell10: xxxxmV cell11: xxxxmV cell12: xxxxmV

cell13: xxxxmV cell14: xxxxmV cell15: xxxxmV


cell16: xxxxmV



(4) Page 4: Display content

hardware version: V xx.xx

software version: V xx.xx

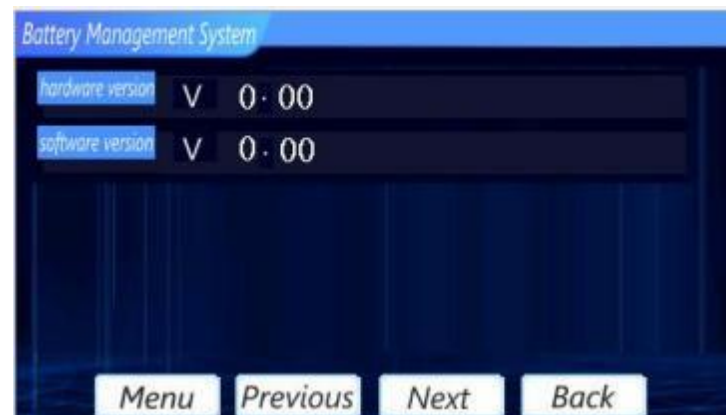

4. The content displayed on the settings interface (as shown in the figure)

(1) First level interface: can read the current protocol, choose the protocol, read the current clock, and the clock



① Enter current protocol and communication method



② Enter selection protocol

1) Display protocol serial number 1-xx, click to select the required Protocol



2) Display the selected protocol and available communication methods, click the communication method you want to select:



3) Display the selected protocol , communication method , and the result of whether the protocol and communication method were successfully written to the BMS board



③Enter current clock: Display the current clock of the BMS board



④Enter modify clock: Click the corresponding position 1-6 of the content you want to modify.



Adjust the value by pressing " " or "-"; click OK after adjusting; once the values at positions 1-6 are all adjusted, click the ✓ at position to complete the modification.



5. System interface display content (as shown in the figure):

Display screen version information (Screen version): V xx.xx



5. System Maintenance

6.1 System Power-Off

Precautions

 WARNING

- After the system powers off, the remaining electricity and heat may still cause electric shocks and body burns. Therefore, wear protective gloves 5 minutes after the system is powered off before performing any operation on the battery, You can maintain the battery only when all indicators on the battery are off
- When the ESS is running, you can only turn off the DC switch of the battery, but cannot power off the ESS completely. In this case, you cannot maintain the battery.

Powering off the System

Step 1 Turn off the AC switch between the inverter and the power grid.

Step 2 Turn off the DC switch at the bottom of the inverter.

Step 3 Turn off the DC switch between the PV string and the inverter if there is any.

Step 4 Turn off the DC switch on the battery.

Step 5 Turn off the Start/Off button on the battery.

----End

6.2 Routine Maintenance

To ensure that the battery can operate properly for a long term, you are advised to perform routine maintenance on it as described in this chapter.

 CAUTION

Before cleaning the system, connecting cables, and ensuring the grounding reliability, power off the system.

Maintenance checklist

Check Item	Check Method	Maintenance Interval
System cleanliness	Check periodically that the heat sinks are free from obstacles and dust.	Once every 6 to 12 months
System running status	1. Check that the battery is not damaged or deformed. 2. Check that the battery does not generate abnormal sound when it is in operation. 3. Check that the battery parameters	Once every 6 months

	are correctly set when the battery is running.	
Electrical Connection	1. Check that cables are secured. 2. Check that cables are intact, and that in particular, the parts touching the metallic surface are not scratched. 3. Check that unused DC input terminals, battery terminals, and communication ports are locked by watertight caps	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 to 12 months.
Grounding reliability	Check that grounding cables are securely connected	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 to 12 months.

6. Storage & Transport

If it needs to be stored for a long time (more than 3 months), it should be stored in an environment with a temperature range of -10~35 °C @ 85% RH Max and free of corrosive gases. It is recommended to charge and discharge it every 3 months, and keep the SOC between 40-50%. The power supply should be stored in a clean, dry, and well-ventilated warehouse, avoiding contact with corrosive substances and keeping away from sources of fire and heat. The product should avoid mechanical impact or heavy pressure from other objects.

During the transportation of the power supply, the battery should be charged at 30-60% and should not be subjected to severe mechanical impact, exposure to sunlight, rain, or inversion. During the loading and unloading process, handle with care and strictly prevent throwing, rolling, and heavy pressure.

7. Technical Specifications

Technical Specifications					
Cell					
1	Cell Type	Polyanion Sodium-ion			
2	Cell Capacity (Ah)	50			
3	Platform Voltage (V)	2.85			
4	Operating Voltage (V)	1.5~3.5			
PACK					
1	Structure	1P18S			
2	Nominal Capacity (Ah)	50			
3	Nominal Voltage (V)	51.3V			
4	Voltage Range (V)	30~63			
5	Nominal Energy (kWh)	2.565			
6	Dimension (W*D*H)	690mm*395mm*172mm			
7	Weight (kg)	47.5			
Base					
1	Dimension (W*D*H) (Without adjustable supporting feet)	690mm*395mm*85mm			
2	Weight (kg)	4.2			
Cover					
1	Dimension (W*D*H)	690mm*395mm*160mm			
2	Weight (kg)	14			
3	Display	LCD			
System					
1	Model	H2G S5-G1	H2G S10-G1	H2G S15-G1	H2G S20-G1

2	PACK Number	2	4	6	8
3	Base Number	1	1	1	1
4	Cover Number	1	1	1	1
5	Nominal Capacity (Ah)	100	200	300	400
6	Nominal Voltage (V)	51.3V	51.3V	51.3V	51.3V
7	Voltage Range (V)	30~63	30~63	30~63	30~63
8	Maximum Charge Current(A)	100	200	250	250
9	Maximum Discharge Current(A)	200	250	250	250
10	Nominal Energy (kWh)	5.13	10.26	15.39	20.52
11	Dimension (W*D*H, mm) (Without adjustable supporting feet)	690*395*504	690*395*784	690*395*1064	690*395*1344
12	Weight (kg)	113.2	208.2	303.2	398.2
13	Altitude	≤2000m			
14	IP Rating	IP65			
15	Optimum Operating Temperature	15~30°C			
16	Charge Operating Temperature	0~55°C			
17	Discharge Operating Temperature	-30~60°C			
18	Heat Dissipation	Natural			
19	Humidity	<=90%RH			
20	Cycle Life	≥6000 cycles @ 0.5C, 90% DOD, 80% SOH ≥8000 cycles @ 0.25C, 90% DOD, 70% SOH			

*In case of any changes in the specification, no further notice will be given.